



Navhouse Corporation
 10 Loring Drive
 Bolton, Ontario, Canada L7E 1J9
 905-857-8102
 www.navhouse.com

Litton/Delco INU Repair/Overhaul Capabilities

Part Number	Description	Part Number	Description
451190-03	LTN 58 Mode Select Unit	460500-02-38-2A	LTN-72RL Inertial Navigation Unit
451985-04	LTN-58 Inertial Navigation Unit	460500-02-38-3A	LTN-72RL Inertial Navigation Unit
451985-04-02	LTN-58 Inertial Navigation Unit	460500-02-38-4A	LTN-72RL Inertial Navigation Unit
451985-04-06	LTN-58 Inertial Navigation Unit	460500-03-01-43-3A	LTN-72RL Inertial Navigation Unit
452080-02-18-27	LTN-72 Inertial Navigation Unit	460500-03-02-12-55-3A	LTN-72RL Inertial Navigation Unit
452080-04	LTN-72 Inertial Navigation Unit	460500-03-02-12-55-8S	LTN-72RL Inertial Navigation Unit
452080-04-02	LTN-72 Inertial Navigation Unit	460500-03-02-13-73-3A	LTN-72RL Inertial Navigation Unit
452080-04-02-20	LTN-72 Inertial Navigation Unit	460500-03-02-13-73-5K	LTN-72RL Inertial Navigation Unit
452080-04-02-28	LTN-72 Inertial Navigation Unit	460500-03-02-13-73-6S	LTN-72RL Inertial Navigation Unit
452080-04-13	LTN-72 Inertial Navigation Unit	460500-03-02-14-73-6S	LTN-72RL Inertial Navigation Unit
452080-04-19-42	LTN-72 Inertial Navigation Unit	460500-03-03-43-3T	LTN-72RL Inertial Navigation Unit
452080-04-20	LTN-72 Inertial Navigation Unit	460500-03-04-48	LTN-72RL Inertial Navigation Unit
452080-04-28	LTN-72 Inertial Navigation Unit	460500-03-05-48	LTN-72RL Inertial Navigation Unit
452080-05	LTN-72 Inertial Navigation Unit	460500-03-49-2A	LTN-72RL Inertial Navigation Unit
452080-05-02	LTN-72 Inertial Navigation Unit	460500-03-49-2B	LTN-72RL Inertial Navigation Unit
452080-05-02-20	LTN-72 Inertial Navigation Unit	460500-03-49-3A	LTN-72RL Inertial Navigation Unit
452080-05-02-28	LTN-72 Inertial Navigation Unit	460500-03-49-3B	LTN-72RL Inertial Navigation Unit
452080-05-02-33-61	LTN-72 Inertial Navigation Unit	460500-03-49-3C	LTN-72RL Inertial Navigation Unit
452080-05-02-36-70	LTN-72 Inertial Navigation Unit	460500-03-49-85	LTN-72RL Inertial Navigation Unit
452080-05-02-48-50	LTN-72 Inertial Navigation Unit	460500-03-49-8A	LTN-72RL Inertial Navigation Unit
452080-05-02-79-29	LTN-72 Inertial Navigation Unit	460500-03-49-8S	LTN-72RL Inertial Navigation Unit
452080-05-04	LTN-72 Inertial Navigation Unit	460500-03-500-03-43-3T	LTN-72RL Inertial Navigation Unit
452080-05-06	LTN-72 Inertial Navigation Unit	460500-03-500-05-48	LTN-72RL Inertial Navigation Unit
452080-05-07	LTN-72 Inertial Navigation Unit	460500-03-500-49-2A	LTN-72RL Inertial Navigation Unit
452080-05-09	LTN-72 Inertial Navigation Unit	460500-03-500-49-3A	LTN-72RL Inertial Navigation Unit
452080-05-10	LTN-72 Inertial Navigation Unit	460500-03-500-49-4A	LTN-72RL Inertial Navigation Unit
452080-05-10-20	LTN-72 Inertial Navigation Unit	460500-03-500-49-6A	LTN-72RL Inertial Navigation Unit
452080-05-10-21	LTN-72 Inertial Navigation Unit	460600-xx	Align Display Unit
452080-05-11	LTN-72 Inertial Navigation Unit	461600-07-08	LTN-90 Inertial Reference Unit
452080-05-12-29	LTN-72 Inertial Navigation Unit	461600-08-08	LTN-90 Inertial Reference Unit
452080-05-13	LTN-72 Inertial Navigation Unit	461600-0700-0801	LTN-90 Inertial Reference Unit
452080-05-14	LTN-72 Inertial Navigation Unit	461600-0800-0801	LTN-90 Inertial Reference Unit
452080-05-16	LTN-72 Inertial Navigation Unit	461600-0700-0802	LTN-90 Inertial Reference Unit
452080-05-19-42	LTN-72 Inertial Navigation Unit	461600-0800-0802	LTN-90 Inertial Reference Unit



Navhouse Corporation
 10 Loring Drive
 Bolton, Ontario, Canada L7E 1J9
 905-857-8102
 www.navhouse.com

Litton/Delco INU Repair/Overhaul Capabilities

Part Number	Description	Part Number	Description
452080-05-20	LTN-72 Inertial Navigation Unit	461800-0200-2201	LTN90-100 Inertial Reference Unit
452080-05-21-41	LTN-72 Inertial Navigation Unit	461800-0200-2203	LTN90-100 Inertial Reference Unit
452080-05-22-24	LTN-72 Inertial Navigation Unit	461800-02-07-126	LTN-91 Inertial Reference Unit
452080-05-28	LTN-72 Inertial Navigation Unit	461800-02-08-116	LTN90-100 Inertial Reference Unit
452080-05-30-46	LTN-72 Inertial Navigation Unit	461800-0208-1606	LTN90-100 Inertial Reference Unit
452080-05-32-60	LTN-72 Inertial Navigation Unit	461800-02-122	LTN90-100 Inertial Reference Unit
452080-05-33-61	LTN-72 Inertial Navigation Unit	461800-0300-2201	LTN90-100 Inertial Reference Unit
452080-05-56	LTN-72 Inertial Navigation Unit	461800-0300-2202	LTN90-100 Inertial Reference Unit
452080-05-85-15	LTN-72 Inertial Navigation Unit	461800-0300-2203	LTN90-100 Inertial Reference Unit
452080-05-500	LTN-72 Inertial Navigation Unit	461800-03-222	LTN90-100 Inertial Reference Unit
452080-05-500-20	LTN-72 Inertial Navigation Unit	461800-04-08-116	LTN90-100 Inertial Reference Unit
452080-05-500-28	LTN-72 Inertial Navigation Unit	461800-0408-1606	LTN90-100 Inertial Reference Unit
452080-05-506	LTN-72 Inertial Navigation Unit	461800-04-122	LTN90-100 Inertial Reference Unit
452090-01	LTN 72 Control Display Unit	461800-0201-2103	LTN-96 Inertial Reference Unit
452090-02	LTN 72 Control Display Unit	463001-0200-0411	LTN-92 Inertial Navigation Unit
452100-01	LTN-72 Mode Select Unit	463001-02-04	LTN-92 Inertial Navigation Unit
452100-01BLK	LTN-72 Mode Select Unit	463001-0400-0502	LTN-92 Inertial Navigation Unit
452100-02	LTN-72 Mode Select Unit	463001-04-02-12	LTN-92 Inertial Navigation Unit
452100-02BLK	LTN-72 Mode Select Unit	463001-04-05	LTN-92 Inertial Navigation Unit
452100-02-02	LTN-72 Mode Select Unit	463001-0500-0411	LTN-92 Inertial Navigation Unit
452100-02-03	LTN-92 Mode Select Unit	463001-05-04	LTN-92 Inertial Navigation Unit
454620-01	LTN-72R Inertial Navigation Unit	463001-6000-0412	LTN-92 Inertial Navigation Unit
454620-01-01	LTN-72R Inertial Navigation Unit	463001-6000-0413	LTN-92 Inertial Navigation Unit
454620-01-02	LTN-72R Inertial Navigation Unit	463001-6110-0412	LTN-92 Inertial Navigation Unit
454620-01-02-12-58	LTN-72R Inertial Navigation Unit	463001-6130-0413	LTN-92 Inertial Navigation Unit
454620-01-02-28	LTN-72R Inertial Navigation Unit	463001-7000-0503	LTN-92 Inertial Navigation Unit
454620-01-02-33-36	LTN-72R Inertial Navigation Unit	463001-7000-0504	LTN-92 Inertial Navigation Unit
454620-01-02-33-50	LTN-72R Inertial Navigation Unit	463001-7000-0505	LTN-92 Inertial Navigation Unit
454620-01-02-42-64	LTN-72R Inertial Navigation Unit	463001-7000-0506	LTN-92 Inertial Navigation Unit
454620-01-02-48-50	LTN-72R Inertial Navigation Unit	463001-7000-1500	LTN-92 Inertial Navigation Unit
454620-01-04	LTN-72R Inertial Navigation Unit	463001-7000-1501	LTN-92 Inertial Navigation Unit
454620-01-05-33	LTN-72R Inertial Navigation Unit	463001-7120-0503	LTN-92 Inertial Navigation Unit
454620-01-16	LTN-72R Inertial Navigation Unit	463001-7130-0506	LTN-92 Inertial Navigation Unit
454620-01-16-19	LTN-72R Inertial Navigation Unit	463001-7130-1501	LTN-92 Inertial Navigation Unit



Navhouse Corporation
 10 Loring Drive
 Bolton, Ontario, Canada L7E 1J9
 905-857-8102
 www.navhouse.com

Litton/Delco INU Repair/Overhaul Capabilities

Part Number	Description	Part Number	Description
454620-01-20	LTN-72R Inertial Navigation Unit	463001-7130-1502	LTN-92 Inertial Navigation Unit
454620-01-28	LTN-72R Inertial Navigation Unit	463001-7140-0504	LTN-92 Inertial Navigation Unit
454620-01-29-31	LTN-72R Inertial Navigation Unit	463001-7140-1500	LTN-92 Inertial Navigation Unit
454620-01-30-00	LTN-72R Inertial Navigation Unit	463001-7160-0505	LTN-92 Inertial Navigation Unit
454620-01-30-30	LTN-72R Inertial Navigation Unit	463001-7170-0506	LTN-92 Inertial Navigation Unit
454620-01-31-34	LTN-72R Inertial Navigation Unit	463001-7180-0505	LTN-92 Inertial Navigation Unit
454620-01-34-35	LTN-72R Inertial Navigation Unit	463001-7180-0506	LTN-92 Inertial Navigation Unit
454620-01-36	LTN-72R Inertial Navigation Unit	463001-7221-0503	LTN-92 Inertial Navigation Unit
454620-01-37	LTN-72R Inertial Navigation Unit	463001-7233-0506	LTN-92 Inertial Navigation Unit
454620-01-38-53	LTN-72R Inertial Navigation Unit	463001-7235-1501	LTN-92 Inertial Navigation Unit
454620-01-40-62	LTN-72R Inertial Navigation Unit	463001-7235-1502	LTN-92 Inertial Navigation Unit
454620-01-41-62	LTN-72R Inertial Navigation Unit	463001-7241-0504	LTN-92 Inertial Navigation Unit
454620-01-42-62	LTN-72R Inertial Navigation Unit	463001-7252-0506	LTN-92 Inertial Navigation Unit
454620-01-43-51	LTN-72R Inertial Navigation Unit	463001-7262-0505	LTN-92 Inertial Navigation Unit
454620-01-44-34	LTN-72R Inertial Navigation Unit	463001-7285-0506	LTN-92 Inertial Navigation Unit
454620-01-46-80	LTN-72R Inertial Navigation Unit	463001-8000-0412	LTN-92 Inertial Navigation Unit
454620-01-48-51	LTN-72R Inertial Navigation Unit	463001-8000-0413	LTN-92 Inertial Navigation Unit
454620-01-53-62	LTN-72R Inertial Navigation Unit	463001-8000-0506	LTN-92 Inertial Navigation Unit
454620-01-54-62	LTN-72R Inertial Navigation Unit	463001-8110-0412	LTN-92 Inertial Navigation Unit
454620-01-56-62	LTN-72R Inertial Navigation Unit	463001-8130-0413	LTN-92 Inertial Navigation Unit
454620-01-500	LTN-72R Inertial Navigation Unit	463001-8130-0506	LTN-92 Inertial Navigation Unit
454620-01-500-20	LTN-72R Inertial Navigation Unit	463001-8130-1502	LTN-92 Inertial Navigation Unit
454620-01-500-28	LTN-72R Inertial Navigation Unit	463001-8170-0413	LTN-92 Inertial Navigation Unit
454620-01-502-42-64	LTN-72R Inertial Navigation Unit	463001-8170-0506	LTN-92 Inertial Navigation Unit
454620-01-502-75-75	LTN-72R Inertial Navigation Unit	463001-8180-0413	LTN-92 Inertial Navigation Unit
454620-01-502-75-76	LTN-72R Inertial Navigation Unit	463001-8180-0506	LTN-92 Inertial Navigation Unit
454620-01-529-31	LTN-72R Inertial Navigation Unit	463001-8233-0506	LTN-92 Inertial Navigation Unit
454620-01-531-34	LTN-72R Inertial Navigation Unit	463001-8235-1501	LTN-92 Inertial Navigation Unit
454620-01-553-62	LTN-72R Inertial Navigation Unit	463001-8235-1502	LTN-92 Inertial Navigation Unit
454620-01-554-62	LTN-72R Inertial Navigation Unit	463001-9000-0413	LTN-92 Inertial Navigation Unit
454620-01-555-62	LTN-72R Inertial Navigation Unit	463001-9180-0413	LTN-92 Inertial Navigation Unit
454620-01-55-62	LTN-72R Inertial Navigation Unit	463001-9180-0506	LTN-92 Inertial Navigation Unit
454620-01-556-62	LTN-72R Inertial Navigation Unit	663450-07	LTN-51 Inertial Navigation Unit
454620-01-557-62	LTN-72R Inertial Navigation Unit	663450-08	LTN-51 Inertial Navigation Unit



Navhouse Corporation
 10 Loring Drive
 Bolton, Ontario, Canada L7E 1J9
 905-857-8102
 www.navhouse.com

Litton/Delco INU Repair/Overhaul Capabilities

Part Number	Description	Part Number	Description
454620-01-558-62	LTN-72R Inertial Navigation Unit	663450-08-02	LTN-51 Inertial Navigation Unit
454620-01-56-62	LTN-72R Inertial Navigation Unit	663450-100-01	LTN-51 Inertial Navigation Unit
454620-01-57-62	LTN-72R Inertial Navigation Unit	663450-14	LTN-51 Inertial Navigation Unit
454620-01-58-62	LTN-72R Inertial Navigation Unit	663550-xx	LTN 51 Control Display Unit
454640-xx	LTN 72R Control Display Unit	663570-xx	LTN 51 Mode Select Unit
456660-02-01	Align Display Unit	7891390-011	Carousel Control Display Unit
457300-04-012	Omega RPU	7883450-041	CIV Inertial Navigation Unit
458100-02-02	Omega Control Display Unit	7883450-521	CIV II Inertial Navigation Unit
458900-03	LTN 72RL LED Control Display Unit	7883450-531	CIV IID Inertial Navigation Unit
458900-03-03	LTN 72RL LED Control Display Unit	7883460-031	Carousel Control Display Unit
458900-03-05	LTN 72RL LED Control Display Unit	7883470-011	Carousel Mode Select Unit
458900-04	LTN 92 LED Control Display Unit	7886580-011	CIV A Inertial Navigation Unit
458900-04-06	LTN 92 LED Control Display Unit	7890860-011	CIV A II Inertial Navigation Unit
458900-05	LTN 92 LED Control Display Unit	7890860-021	CIV A III Inertial Navigation Unit
458900-06	LTN 92 LED Control Display Unit	7890860-511	CIV A IV Inertial Navigation Unit
458900-06-01	LTN 92 LED Control Display Unit		
458900-06-02	LTN 92 LED Control Display Unit		
458900-07	LTN 92 LED Control Display Unit		
458900-08-01	LTN 92 LED Control Display Unit		
458900-08-02	LTN 92 LED Control Display Unit		
458900-09-01	LTN 92 LED Control Display Unit		
458900-09-02	LTN 92 LED Control Display Unit		
458900-10-01	LTN 92 LED Control Display Unit		
458900-11-01	LTN 92 LED Control Display Unit		